

## Using the Touchpad:

### Main Screen:

Doc Cam:	Switches to Document Camera (ELMO)
VCR/DVD*	Switches to DVD/VCR
Laptop 1	Switches to cart laptop hookup
Laptop 2	Not Used
Aux VID	Switches to regular Video and audio cables
Aux S-Vid	Switches to SVideo cable
Evidence	Raises, mutes, or Lowers the volume level for the cart to the courtroom.



### Notes:

\*Selecting the VCR/DVD will take you to a 2<sup>nd</sup> screen that will enable you to run the player remotely

If the Touchpad appears to be "off" or blank it's in standby, touch the screen anywhere to turn back on

The Doc Cam and VCR/DVD Buttons DO NOT turn them on, they must be turned on manually

Image shows a Pittsburgh Touchpad, Erie does not have the two Aux-Vid buttons, other than that and a slight button order different, functionally they are the same.

## Controlling the DVD/VCR and Document Camera:

### DVD/VCR Screen: (Make sure the DVD/VCR is Turned ON)

VCR:	Selects VCR Operation
DVD:	Selects DVD operations
Play, Stop etc	Controls the selected device
Menu*	Goes to DVD's Menu
Enter*	Selects items from DVD menu
Arrow Keys*	Moves around selectable items that are in the DVD's Menu
Volume/Mute	Affects output volume.



\*These functions do not have a use when using the VCR.

### Document Camera Controls: (Make sure the camera is turned on)



Turns on/off Document Camera  
Green Light-Camera is on, White Light- Camera is off



Turns on/off the camera light



Gray Zoom Wheel	Zooms in (down), and out (up)
Focus +/-	Manually Focuses image (usually use AF instead)
AF	Lit Green – Auto Focus is on, White it is Off



## Using the Nomad Touchpads:

Judge Gibson, Johnstown  
Pittsburgh Magistrate Courtrooms

### Main Screen\*:

External PC:	Laptop Hookup Cable
Aux Souce	Video Hookup Cable
VCR Player	VCR Part of DVD/VCR
DVD Player	DVD Part of DVD/VCR
Document Camera	Turns on and switches to Document Camera

ON/OFF Buttons turn on, or off item listed

(No Button for Projector in Magistrate systems)



### VCR Player Screen\*:

Source Menu:	Back to Main Screen
Play, REW, STOP etc	Operates VCR functions
VCR/DVD On/Off	Turns deck on/off
Cycle Thru Input Jacks	If recording, chooses which input (Front back S-VID) you record



\* ALWAYS operate Johnstown's DVD/VCR and Document Camera from the Touchpad, never use the buttons on the equipment as this could cause the system to lock up.

## Using the Touchpad:

### Johnstown and Magistrate Courtrooms\*

#### DVD Screen:

Source Menu:	Back to Main Screen
Back	Same Function
Play, REW, STOP etc*	Operates DVD functions
Disc Menu	Goes to DVD's menu
Arrows and Enter	Used for selecting items from the DVD's menu
VCR/DVD On/Off	Turns deck on/off



#### Document Camera Screen:

Source Menu/Back:	Back to Main Screen
Auto Focus	Tap to focus image
Text Image	Toggles between 'text' and 'photo' modes
Zoom – Zoom +	Zooms In and Out
Pos/Neg	Switches to Neg/pos
Rotate	Rotates Image 90 deg
Doc Cam On/Off	Turns camera on or off
Lights Cycle	Cycles between upper, lower, and no lights on camera.



\*With the Johnstown NOMAD Podium ALWAYS operate items from the Touchpad, never use the buttons on the equipment as this could cause the system to lock up.