


DOCUMENT CAMERA CONTROLS SCREEN

This screen appears when you touch the **Doc Cam** button on the Main Menu screen. The **Doc Cam** button will turn blue, indicating that it is the active evidence source.

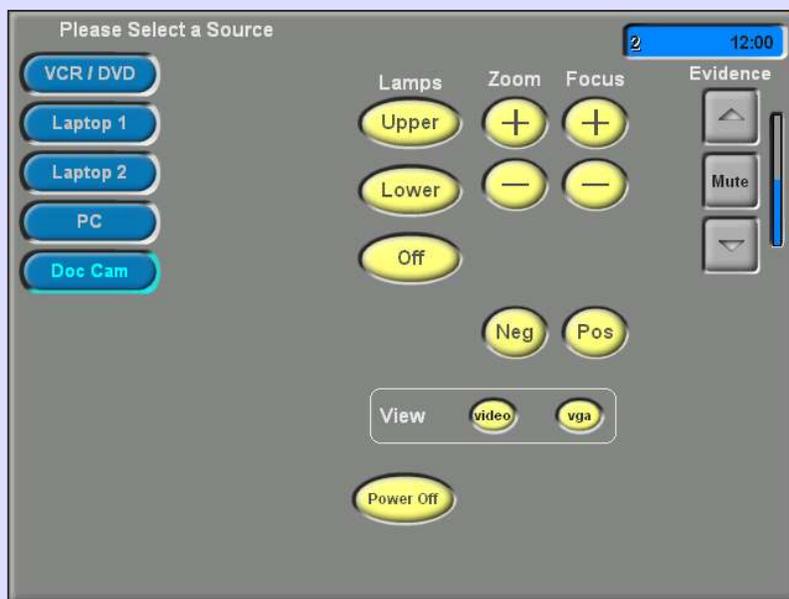

Document Camera Controls

Use the following controls to operate the Document Camera:

POWER OFF

To turn the document camera off, press the **Power Off** button.

LAMPS

Press this push button to alternatively turn the **Upper** lamps on, turn the **Lower** lamps on, or turn all the lamps **Off**.

ZOOM +/ZOOM -

To zoom the image, press the + (plus) button to magnify or press the - (minus) button to zoom out.

FOCUS +/FOCUS -

The focus buttons will adjust the overall viewing of the image. Press the “+” (plus) button to focus in or press the “-” (minus) button to focus out.

NEGATIVE/POSITIVE

When touched, this push button toggles between Positive and Negative. Use the **Positive** mode to view materials such as printed matter or 3-D objects. Use the **Negative** mode to view negative film as a positive image. This function is very useful for viewing 35 mm slides, X-rays, MRIs, and autoradiographs.

VIEW VIDEO or VGA

Select the desired viewing mode by pressing either the Video or VGA button.